

## SB-N-PTHFNDR/10WØ Stealthbox™

Fits 1996 - 1999 Nissan Pathfinder  
and Infiniti QX4

### Installation Guide:

This Stealthbox is a product which requires professional installation skills and tools. Please read this installation guide thoroughly before beginning the project. It will guide you step by step through the installation. Several of the steps in this process may require two people to accomplish.

It is absolutely vital that the enclosure be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems: 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer and 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

**STEP 1:** In the hatch area, pull up the carpet from the floor on the driver side to expose the padding underneath.




**STEP 2:** Place the Stealthbox in its mounting position.

**STEP 3:** Cut the padding along the edge of the Stealthbox. After final installation, the Stealthbox should sit only on a layer of carpet so that it more easily couples to the body of the vehicle.




**STEP 4:** Remove the Stealthbox from the vehicle, then remove the padding that was cut off in the previous step.

**STEP 5:** Adjust the cargo hook so that it is pushed forward. If this step is neglected the Stealthbox may not fit properly and the hook will be unusable.

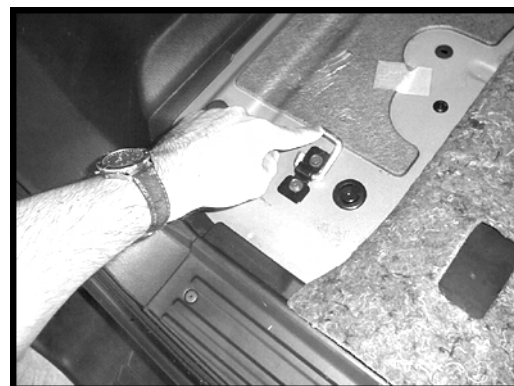

**STEP 6:** Remove the evaporative fuel recovery canister from under the vehicle. To do this first remove the three 12mm bolts holding the canister in place. Then carefully disconnect all the hoses and wires attached to the canister. Remove the canister.

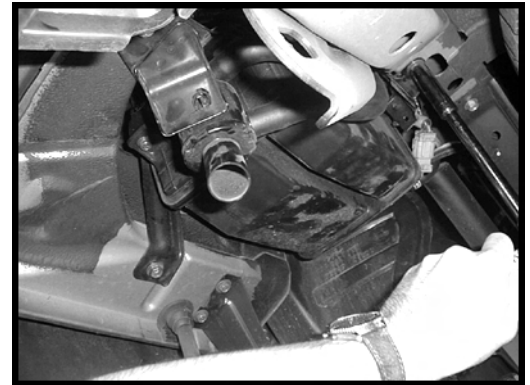

**STEP 7:** Thread the supplied 3/8" X 1 1/2" bolts into the threaded inserts in the Stealthbox. Tighten fully.

**STEP 8:** Place the supplied 3" X 3" wax squares, sticky side down, in the area of the Stealthbox mounting holes as shown.



**STEP 9:** Place the Stealthbox in position. Press down on the Stealthbox to leave a clear indent in each wax square. Remove the Stealthbox.

**STEP 10:** Check under the vehicle to be sure there are no loose brake lines, fuel lines, etc. that may be contacted while drilling.

**CAUTION:** Always wear eye protection when drilling!

**STEP 11:** Drill 1/2" diameter hole through the floor of the vehicle in the location of the indentation in each of the wax squares.




**STEP 12:** Remove the wax squares from the vehicle.

**STEP 13:** Place the carpet back in its original position. Make an "X" shaped incision in the carpet above each mounting hole.



**STEP 14:** Run speaker wire to the Stealthbox location. Trim to proper length and attach to the Stealthbox. Test the operation of the Stealthbox.

**STEP 15:** Place the Stealthbox in its mounting position. While one person positions the Stealthbox from inside the vehicle a second person should thread the supplied 3/8" X 1 1/2" bolts, fender washers and lock washers into the Stealthbox. Apply a bead of sealant between the washers and the floor of the vehicle to prevent leaks (see diagram at right).

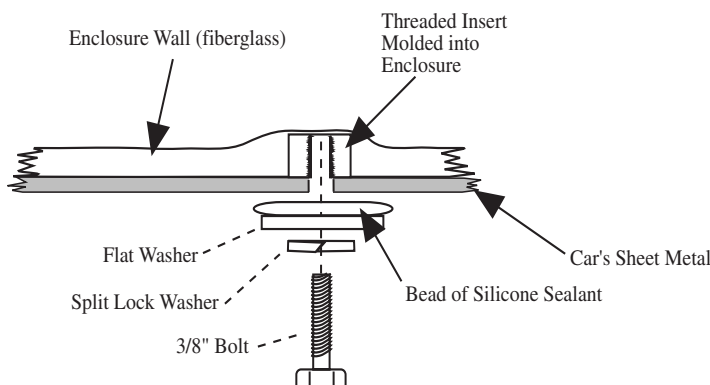

**STEP 16:** Replace the canister making absolutely sure all lines, hoses, and wires have been reconnected.

**IMPORTANT!!!**


Once the bolts are tightened, spray undercoating onto the bolt heads to prevent rust, leaks and loosening of the bolts over time. Failure to do so may result in severe corrosion and may present a serious safety hazard.



**This completes the installation.**

**Specifications:**

**Enclosure Type:** Acoustic Suspension (Sealed)  
**Driver Type:** JL AUDIO 10WØ-4 Subwoofer  
**Cont. Power Handling:** 125 Watts  
**Nominal Impedance:** 4Ω

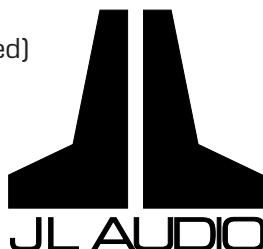

**Supplied Hardware:**

(2) 3" X 3" wax square  
(2) 3/8" X 1 1/2" Bolt  
(2) 3/8" X 1 1/4" Fender Washer  
(2) Split Lock Washer